

Assembly Instructions Parma Single Bed

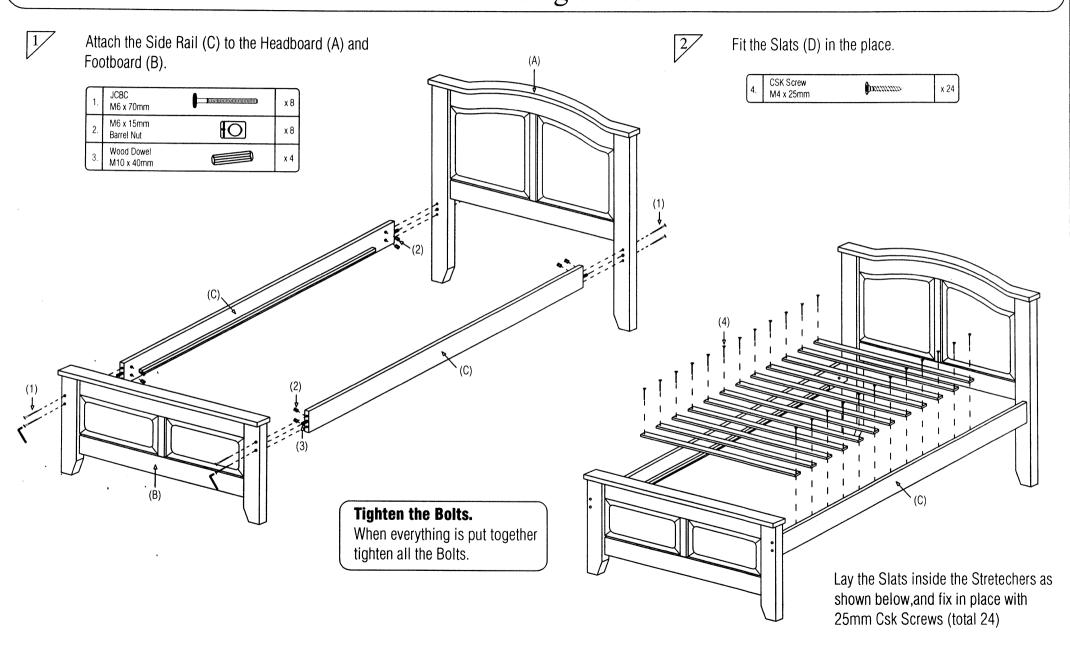


Assembly Instructions Parma Single Bed


Part in Box 1 Headboard x 1 (A)

Part in Box 2




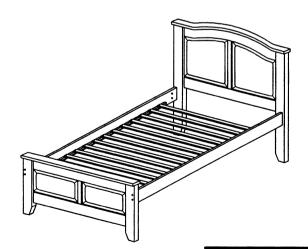

Part in Box 3



Part in Box 4

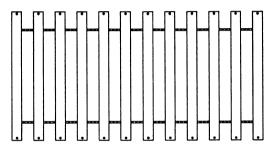

(D) Set of Slats x 1

ASSEMBLY TIPS

Remove hardware from box and sort by size to check that all hardware and parts are present before assembling. Follow instructions below in the proper sequence to ensure fast, easy and correct assembly.


\triangle

WARNING !!

DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS ARE IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.

NOTE: DURING ASSEMBLY, DO NOT TIGHTEN ANY SCREWS UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.

Hardware List

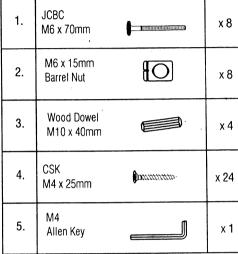

Tool required for assembly:

- * Allen Key (supplied)
- * Phillips Screwdriver (not supplied)

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean, smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.