





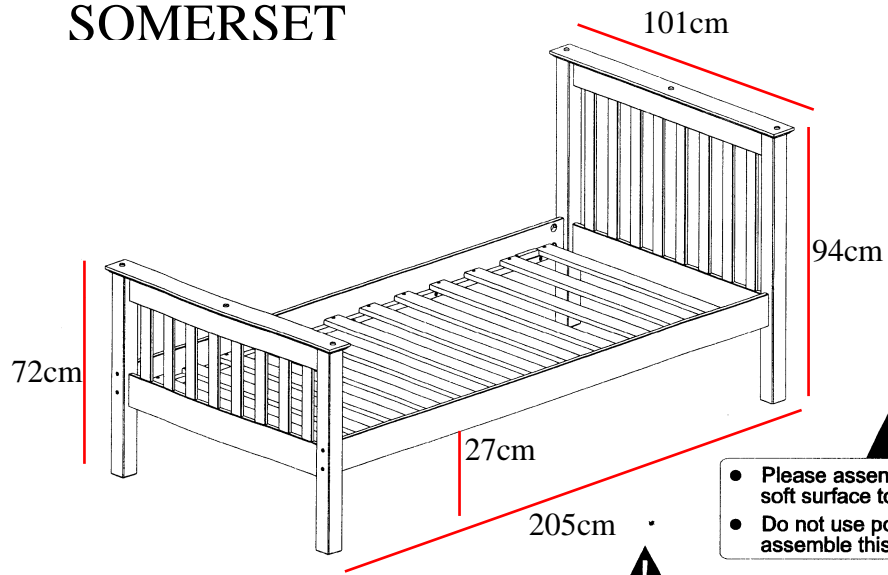



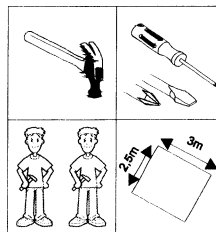
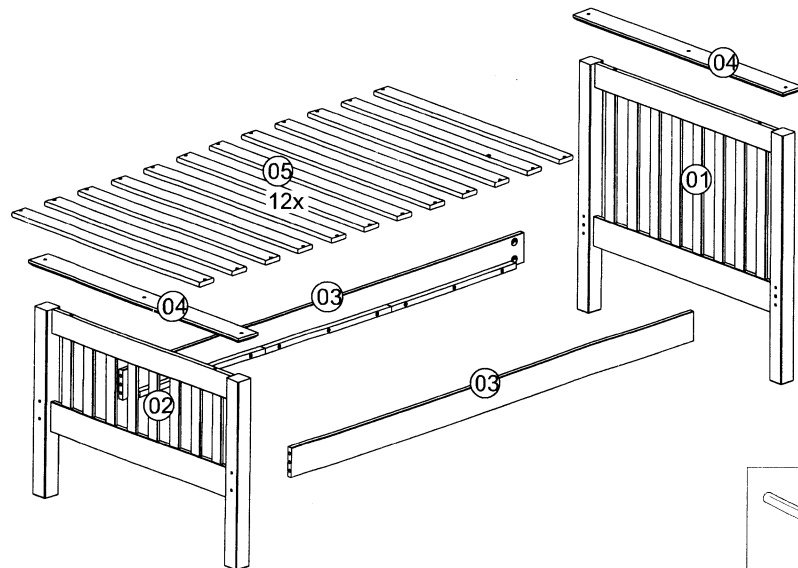
# SOMERSET




- Please assemble on a clean soft surface to avoid damage.
- Do not use power tools to assemble this product.

- Please check contents and read instructions before commencing assembly.
- Assemble this article following the enclosed instructions carefully.
- Please take care to avoid damaging panels during assembly.


A	 1/4x100mm	08
B	 1/4	08
C	 10x50mm	08
D	 4,0x35mm	30
E	 4mm Hex wrench	01
F	 Spacer block	02
G		06




01

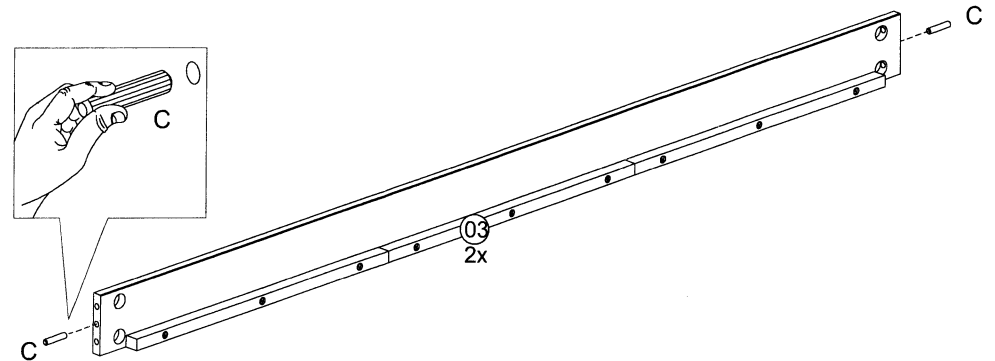

02

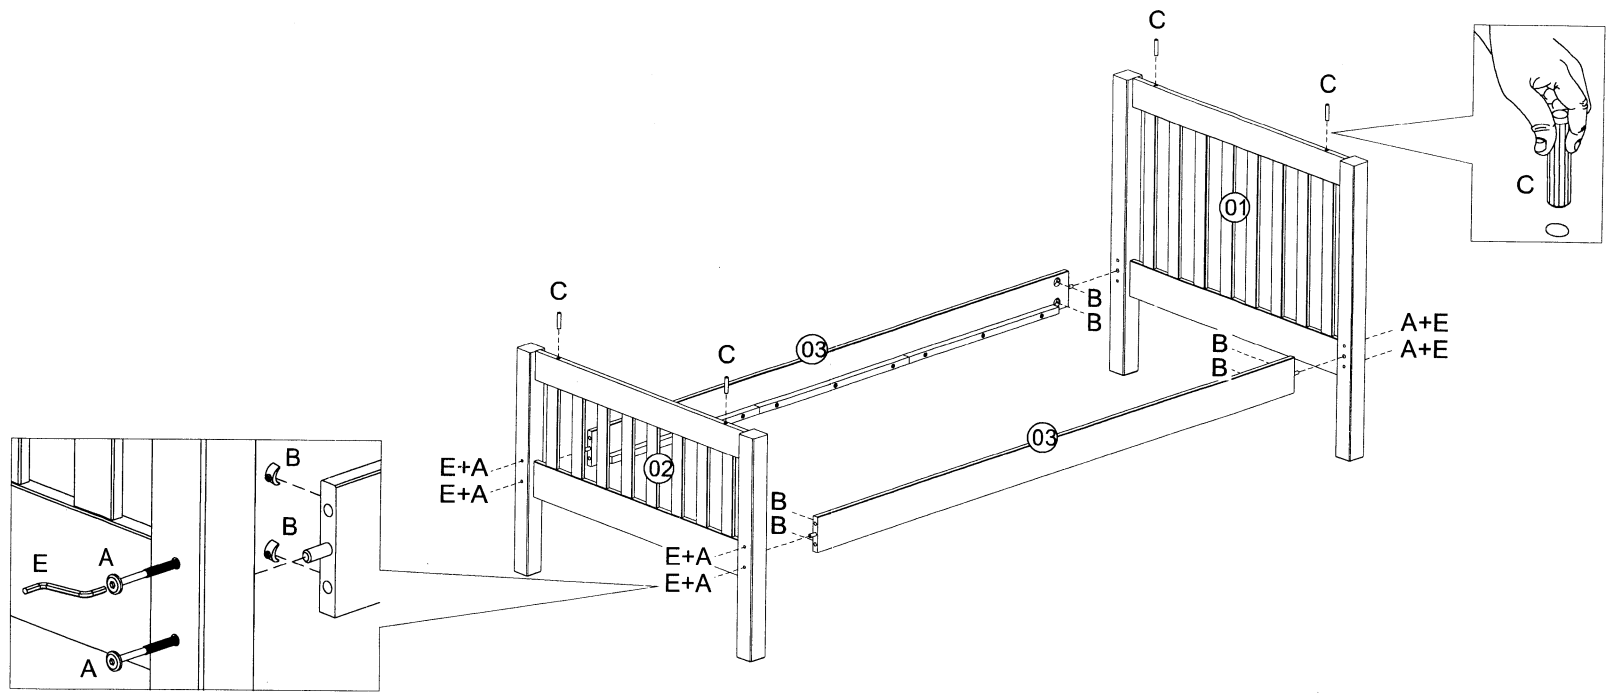

03

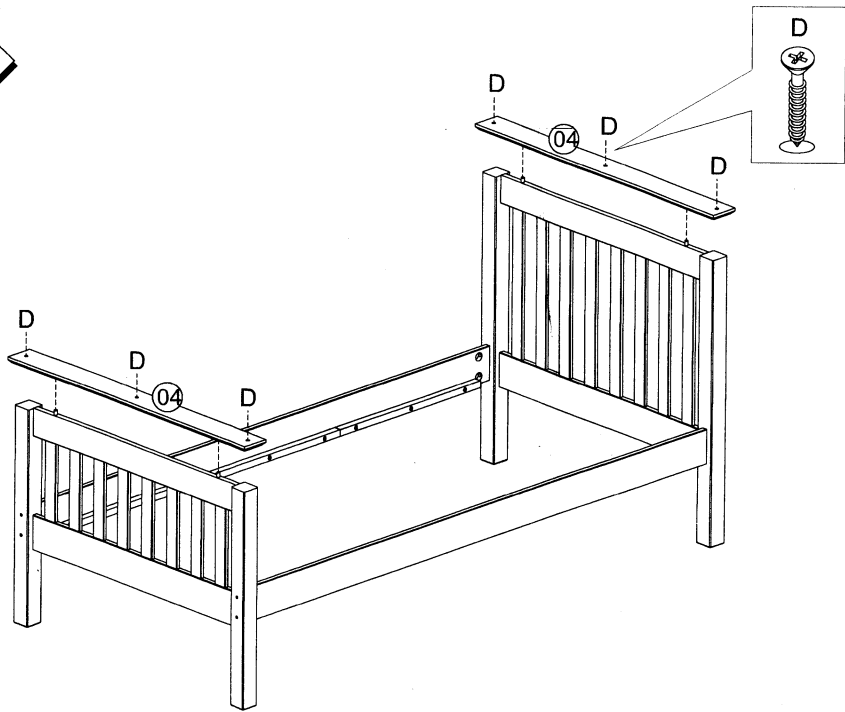

04

